


## **PLAYBACK AMPLIFIER**

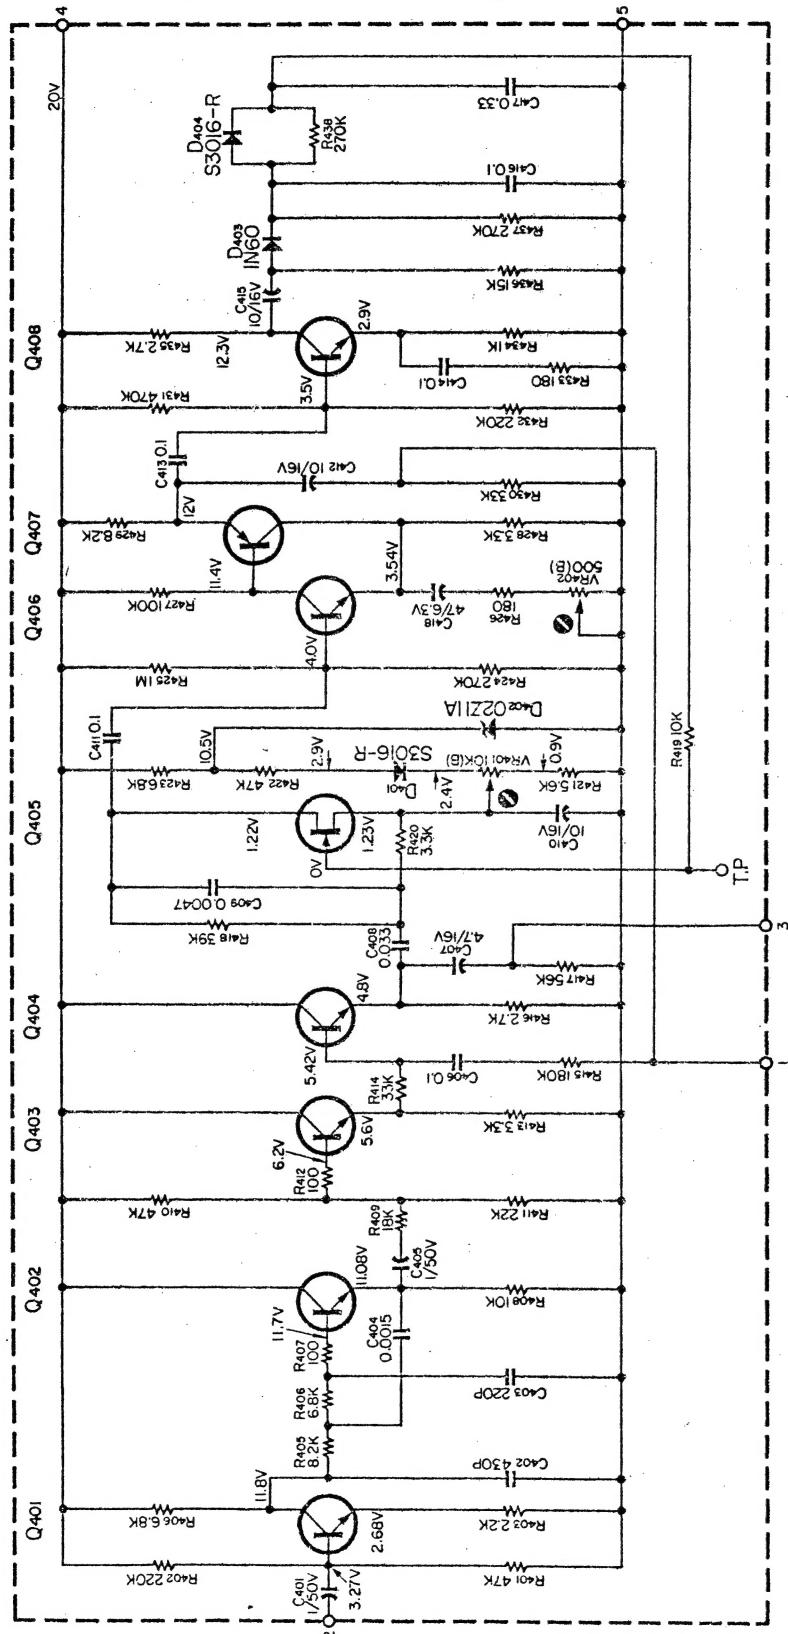


115

CIRCUIT REF. NO.	DESCRIPTION
Q401-402-403	2SC733-Y
Q404-406-408	2SK30-Y
Q407	2SA562-Y


88

8

## **PLAYBACK AMPLIFIER**

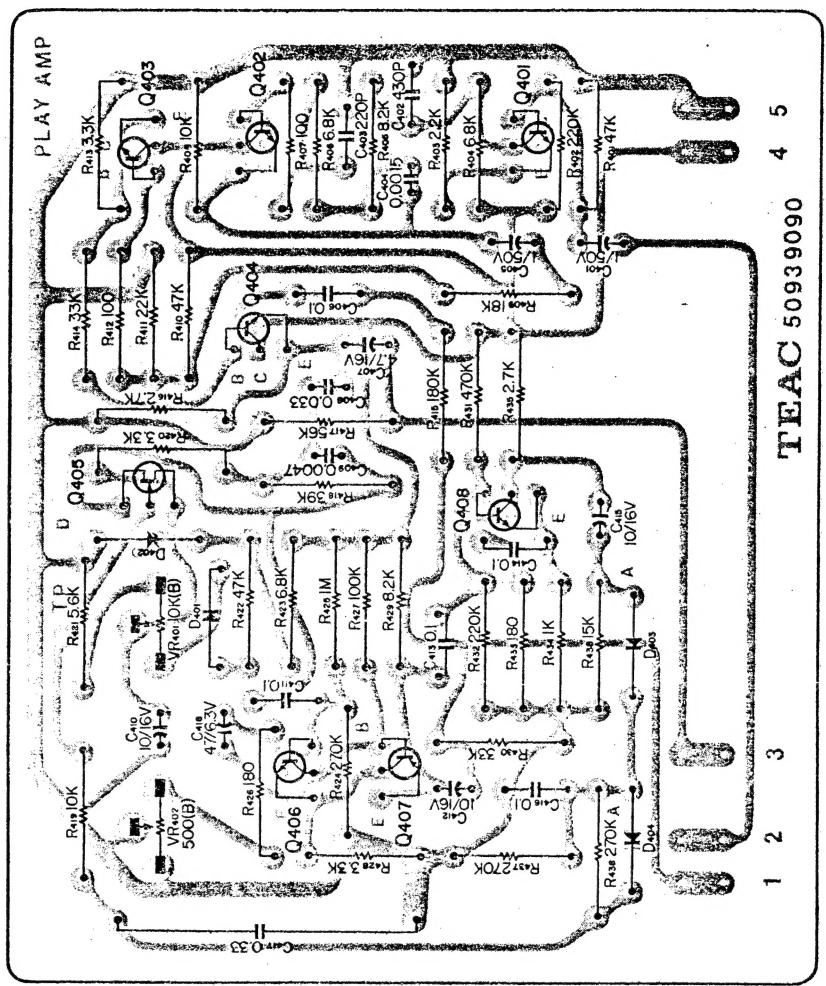


# METER, OUTPUT, OSC ASSY

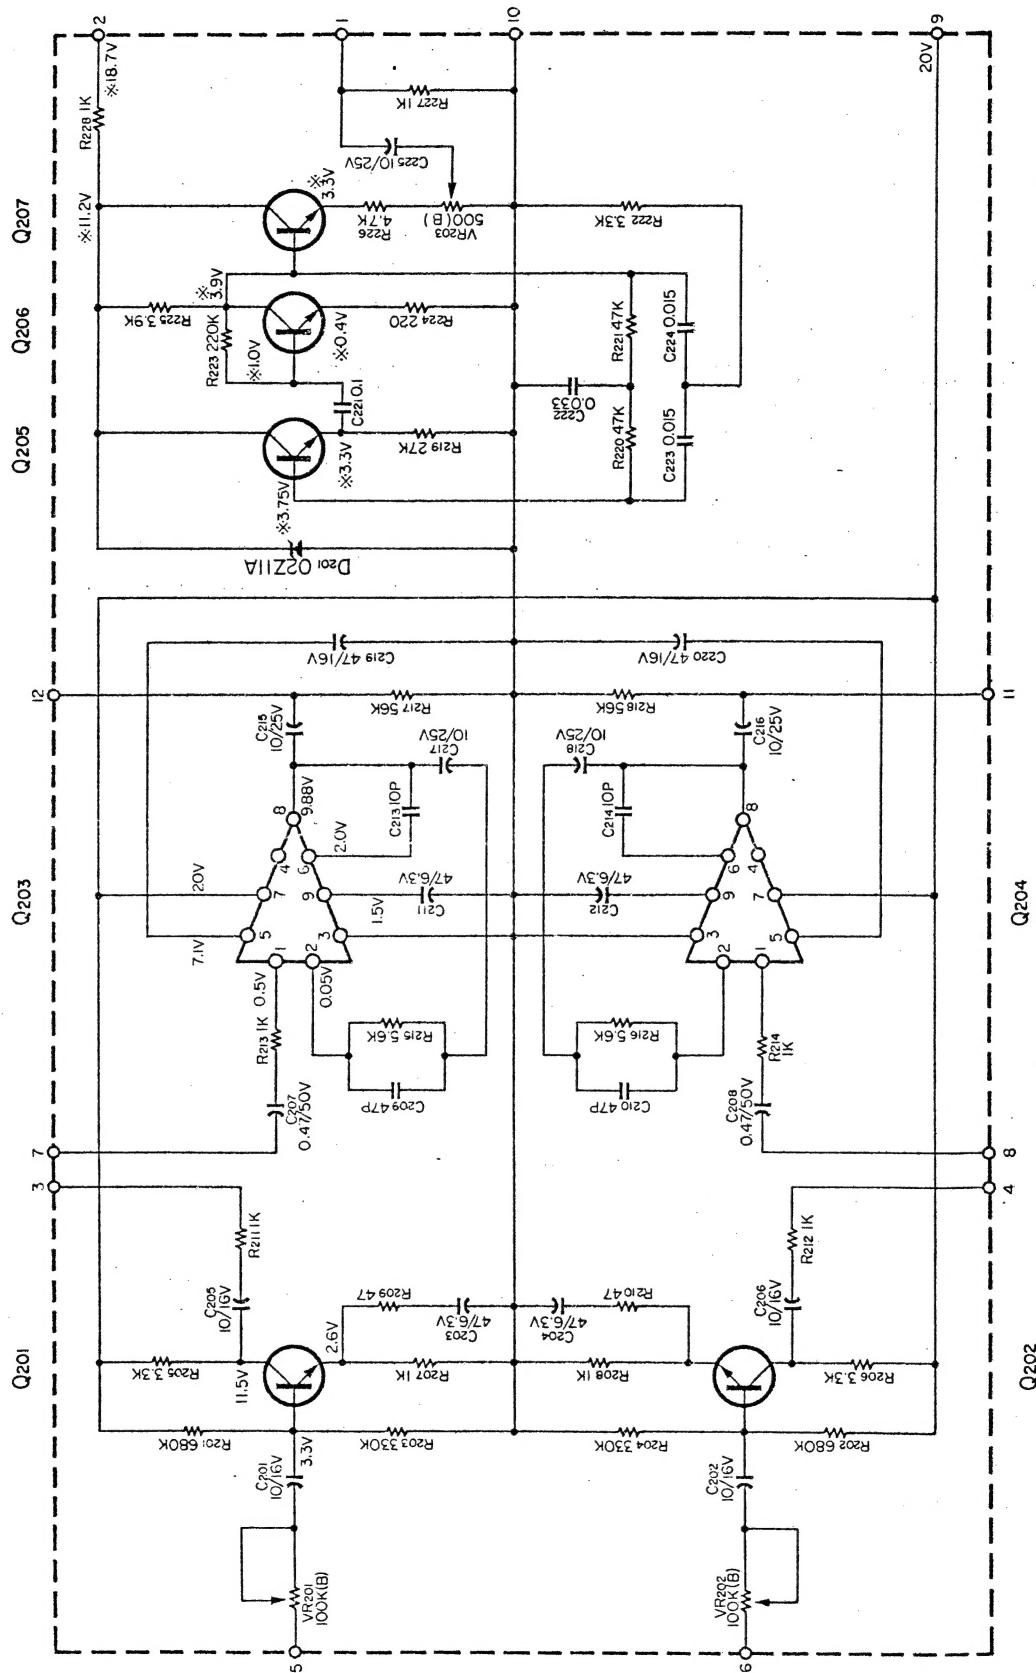


CIRCUIT REF. NO.	DESCRIPTION
Q201/Q202-Q205/Q206-Q207	2SC733-Y
Q203/Q204	IC 42709

N-055


## **METER, OUTPUT, OSC ASSY**

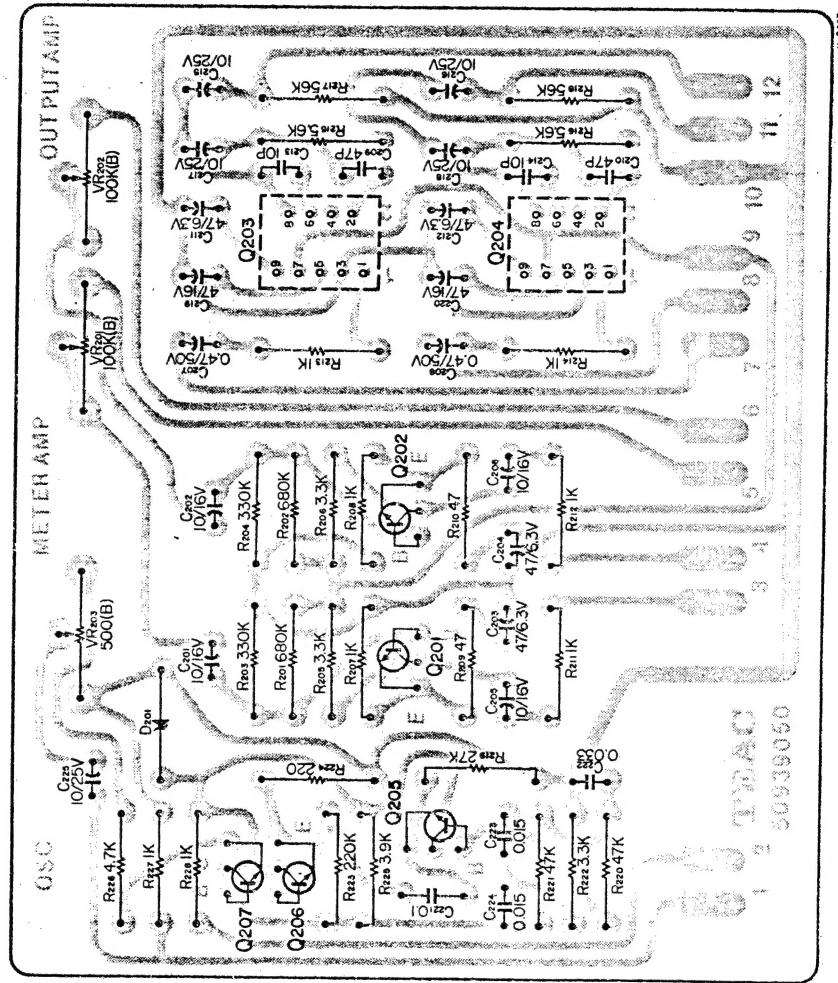


# MIC, LINE AMPLIFIER

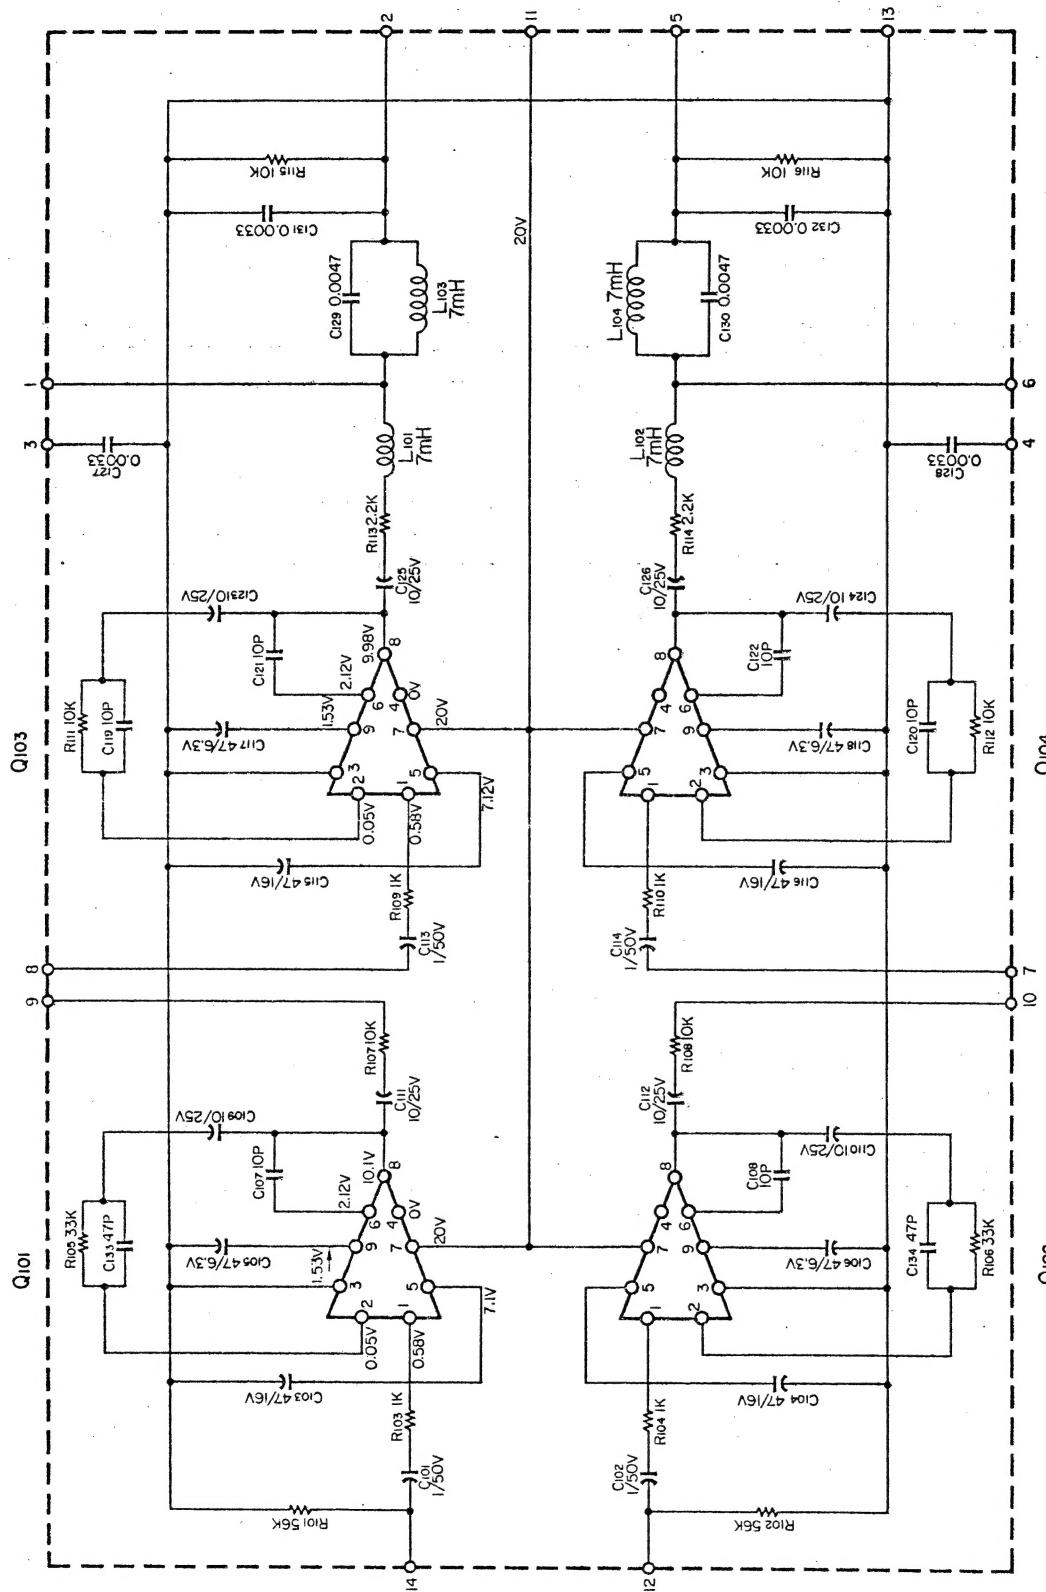

# MIC, LINE AMPLIFIER

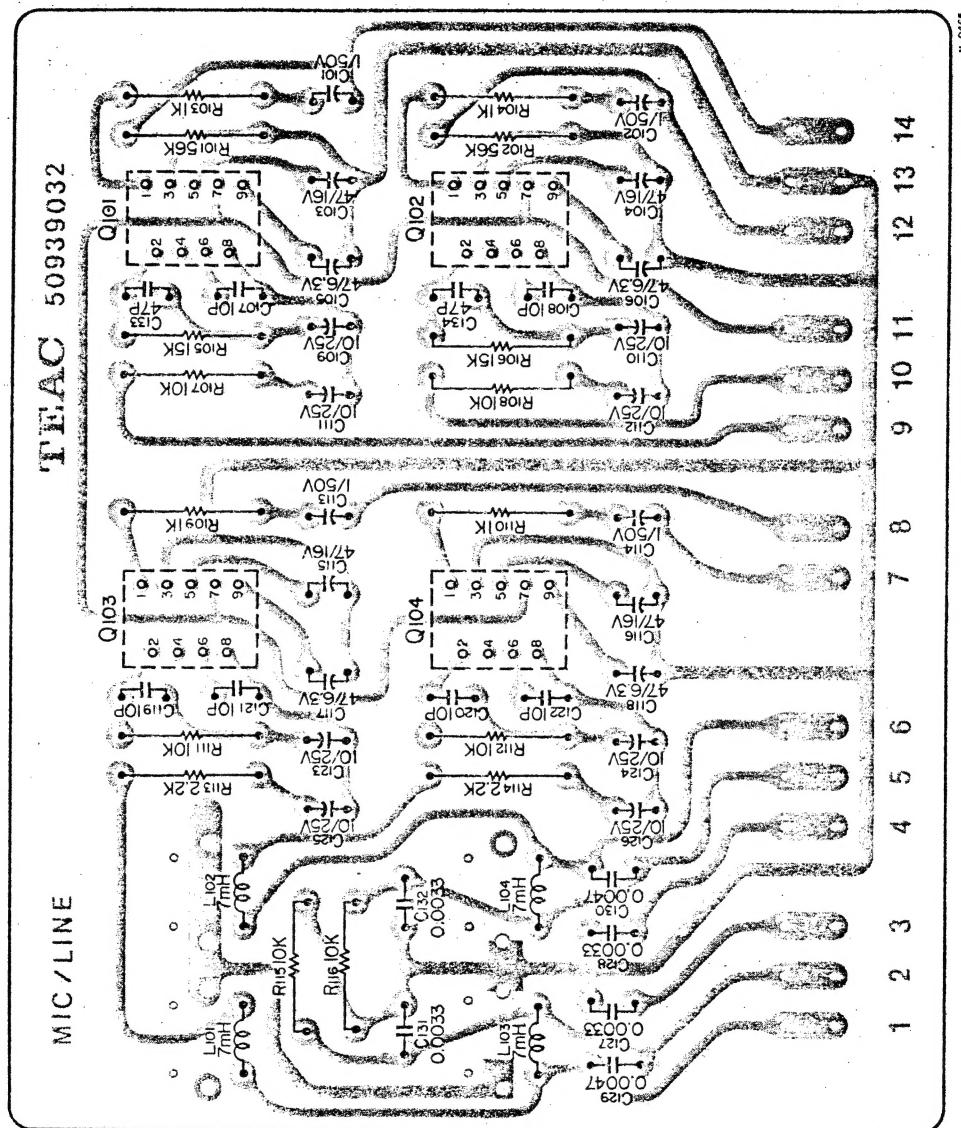


# RECORD AMPLIFIER

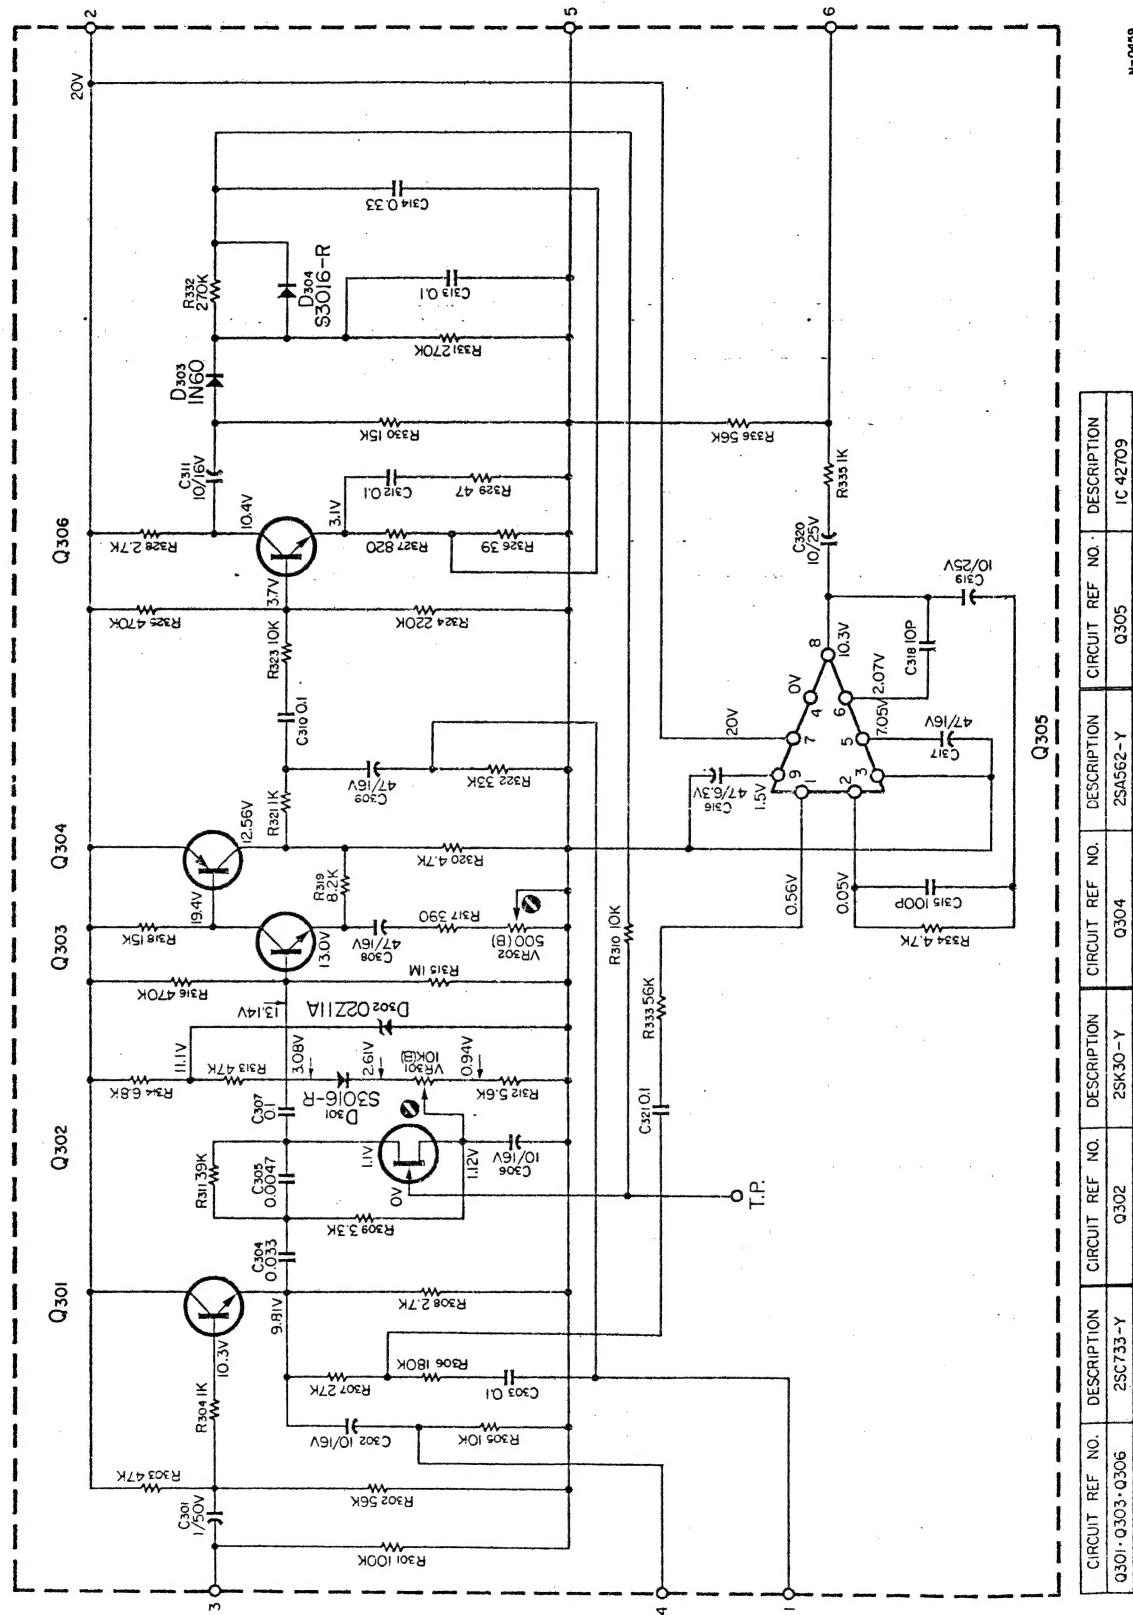


CIRCUIT REF. NO.	DESCRIPTION						
Q301-Q303-Q306	2SC733-Y	Q302	2SK30-Y	Q304	2SA562-Y	Q305	IC 42709

N-0459

## **RECORD AMPLIFIER**

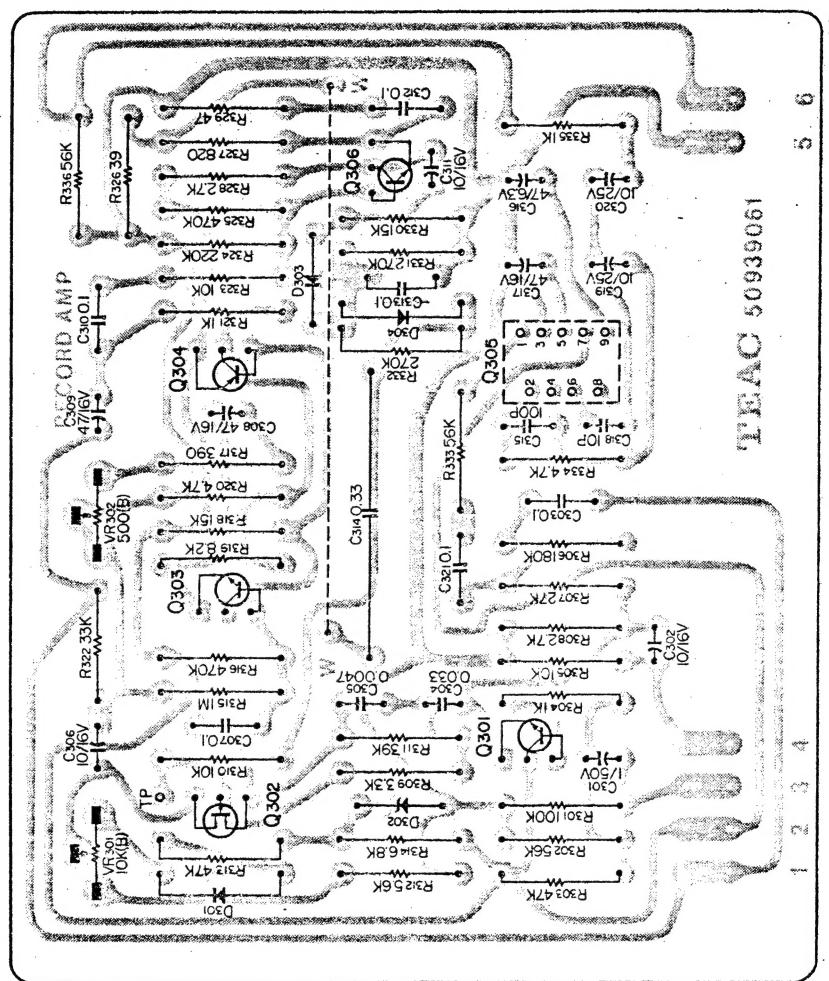

# OVERALL CIRCUIT DIAGRAM

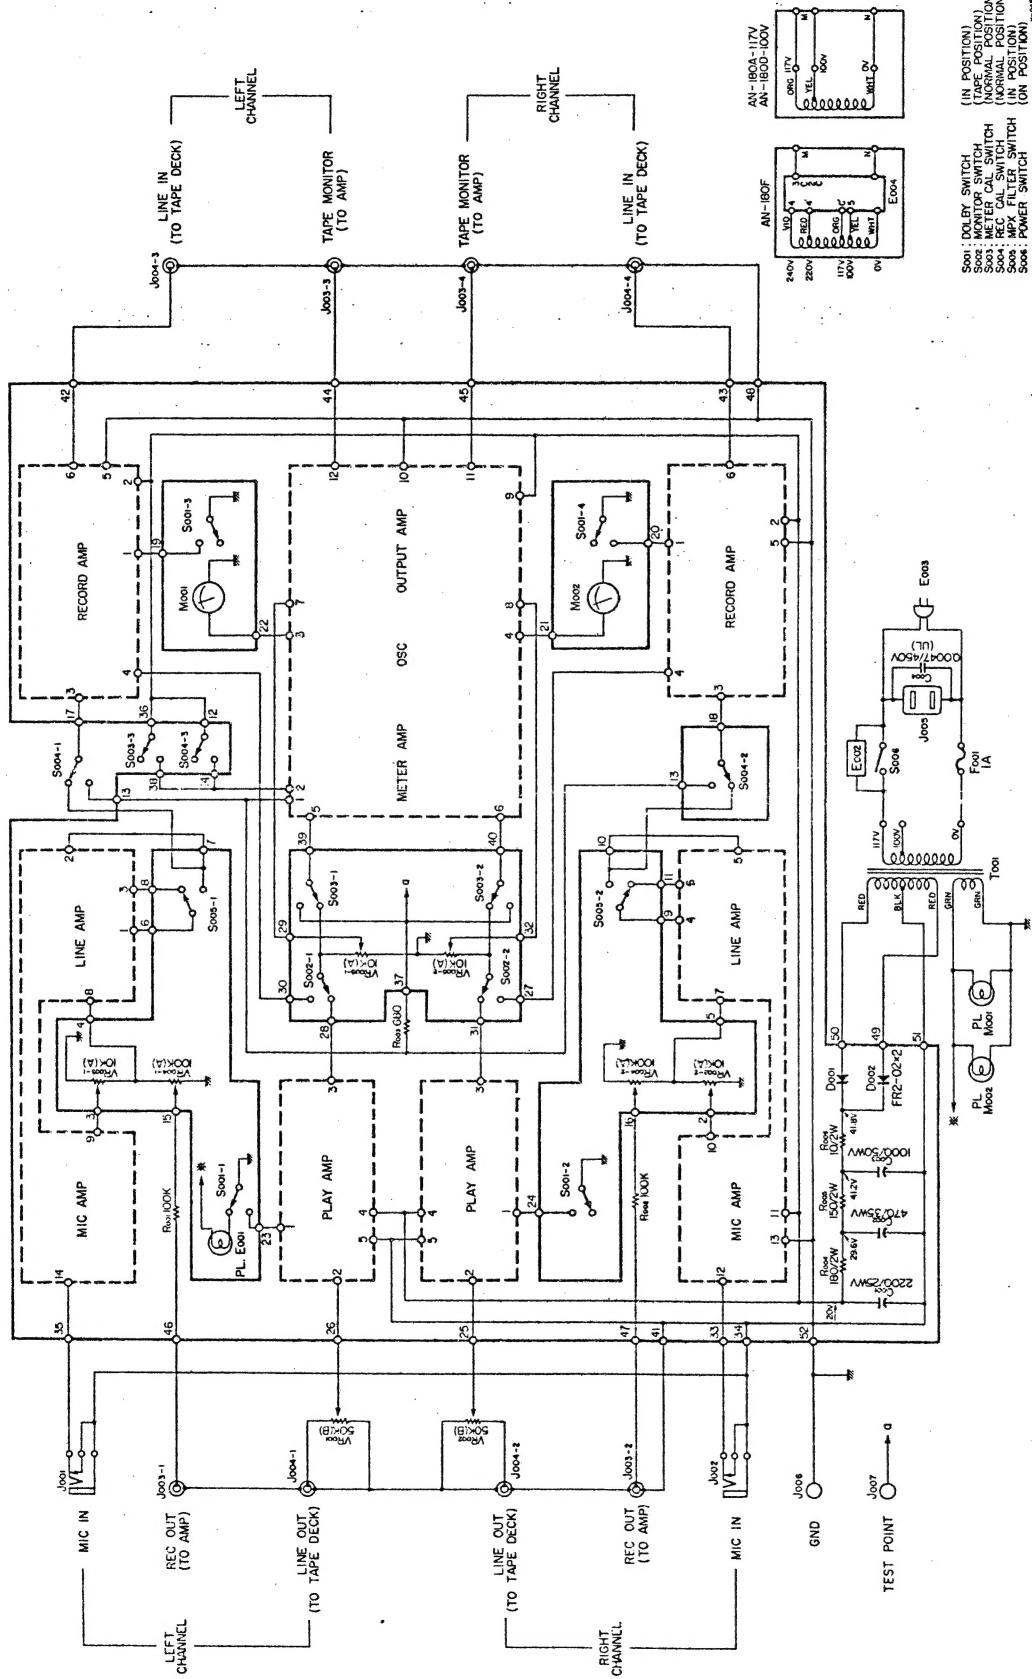

(IN POSITION)  
S001 DOLBY SWITCH  
S002 TAPE MONITOR SWITCH  
S003 METER CAL SWITCH  
S004 REC CAL SWITCH  
S005 REC FILTER SWITCH  
S006 POWER SWITCH  
(ON POSITION)

(NORMAL POSITION)  
S001 DOLBY SWITCH  
S002 TAPE MONITOR SWITCH  
S003 METER CAL SWITCH  
S004 REC CAL SWITCH  
S005 REC FILTER SWITCH  
S006 POWER SWITCH  
(ON POSITION)

MAIN PC BOARD

